



PIN	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
SIGNAL	DUMMY	FRS	M	CL	DISP	VSS	CS1B	CS2	VDD	RESETB	RS	VSS	RW_WR	E_RD	VDD	DB0	DB1	DB2	DB3	DB4	DB5
PIN	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42
SIGNAL	DB6	DB7	VSS	TESTL1	TESTL2	VDD	DUTY0	DUTY1	VSS	MS	CLS	VDD	MI	PS	VSS	VDD	VOUT	C3+	C3-	C1+	C1-
PIN	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61		
SIGNAL	C2+	C2-	VSS	VR	VD	V1	V2	V3	V4	VSS	BSTS	DCDC5B	VDD	HPM	INTRS	VSS	TEMPS	VDD	DUMMY		